



ORIGINAL	SUPERIOR
	<b>POWER</b>
<b>AUDIO</b>	<b>MUTE</b>
<b>MENU</b>	<b>MENU</b>
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
<b>INPUT SELECT</b>	/ <b>SOURCE</b>
<b>DISPLAY</b>	
<b>SYSTEM MENU</b>	
<b>OPTIONS</b>	
<b>SKIP NEXT</b>	<b>VOL+</b>
<b>SKIP PREV</b>	<b>VOL -</b>
<b>PROG+</b>	<b>P+</b>
<b>PROG -</b>	<b>P -</b>
<b>UP</b>	<b>UP</b>
<b>DOWN</b>	<b>DOWN</b>
<b>LEFT</b>	<b>LEFT</b>
<b>RIGHT</b>	<b>RIGHT</b>
<b>ENTER</b>	<b>OK</b>
<b>RETURN</b>	<b>BACK</b>
<b>TV/DVD</b>	<b>TV/DTV</b>
<b>TITLE LIST</b>	<b>INFO</b>
<b>TOP MENU</b>	<b>EPG</b>
<b>EJECT</b>	/ <b>NET TV</b>
<b>PAUSE</b>	/ <b>SMART TUBE</b>
<b>STOP</b>	/ <b>SMART VIDEO</b>

ORIGINAL	SUPERIOR
<b>REC</b>	<b>RED</b>
<b>REW/SLOW REW</b>	<b>GREEN</b>
<b>PLAY</b>	<b>YELLOW</b>
<b>FWD/SLOW FWD</b>	<b>BLUE</b>
<b>HDD</b>	<b>SHIFT+1</b>
<b>DVD</b>	<b>SHIFT+2</b>
<b>CHAPT. MARK - MARK</b>	<b>SHIFT+3</b>
<b>CHAPT. MARK - ERASE</b>	<b>SHIFT+4</b>
<b>TIMER</b>	<b>SHIFT+5</b>
<b>TIMER LIST</b>	<b>SHIFT+6</b>
<b>TIME / TEXT</b>	<b>SHIFT+</b>
<b>SUBTITLE</b>	<b>SHIFT+</b>
	<b>SHIFT+LEFT</b>
	<b>SHIFT+RIGHT</b>
<b>REC MODE</b>	<b>SHIFT+FAV</b>
<b>REC STOP</b>	<b>SHIFT+</b>
<b>SYNCHRO REC</b>	<b>SHIFT+RED</b>
<b>TV</b>	
	<b>SHIFT+POWER</b>
	<b>SHIFT+</b>
<b>VOL+</b>	<b>SHIFT+ VOL+</b>
<b>VOL -</b>	<b>SHIFT+ VOL -</b>
<b>PROG+</b>	<b>SHIFT+ P+</b>
<b>PROG -</b>	<b>SHIFT+ P -</b>

COMPATIBLE  
DEVICES



Simply  
Digital

Simply

Hotel TV

Safe



VISIT OUR WEBSITE  
TO DISCOVER